



Battery Status and Freedom Inverter/Charger Remote Control

## Monitors and Controls Inverter/Charger System

The Freedom Remote Control Panel allows you to control your Freedom Combi, Freedom 458 and Freedom Marine Series Inverter/Charger system from any convenient location. With controls that can be accessed directly from the front panel, it is easy to read, operate and install.

### Product Features

- ▶ Independent invert and charge on/off controls
- ▶ Push button control of power sharing, equalizing, battery set-up
- ▶ Multi-colored LED displays battery state of charge, fault conditions, AC input, DC voltage and DC amperage
- ▶ LED warning indicators for low battery and overload warning
- ▶ Splash resistant design
- ▶ Incoming AC breaker selection allows programmable power sharing
- ▶ Easy to install
- ▶ One year warranty

Note: The 24-volt models of Freedom Combi inverter/chargers require a different Freedom Remote.

Specifications	
Voltage bar graph	10.0 – 15.5 VDC
DC amps bar graph	Idle mode = off Loaded = <10 300 DC amps
Operating temperature range	0 – 70°C
Compatible battery types	wet/gel/AGM
Design	Splash resistant
Dimensions (L x W x D)	5.75 x 3.75 x 1.75" (146 X 95 X 25 mm)
Cutout size (W x H)	4.875 x 2.875" (116 X 73 mm)
Weight	3 oz (85 g)
Warranty	One year
Part number	84-2056-01

Note: Specifications subject to change without notice.