

Freedom e-GEN System Installation Guide for OEM Installers



⚡⚠ DANGER

HAZARD OF FIRE, ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

This Freedom e-GEN System Installation Guide for OEM Installers is in addition to, and incorporates by reference, the relevant product manuals for each product in the power system. After reviewing this guide you must read the relevant product manuals. Unless specified, information on safety, specifications, installation, and operation is as shown in the primary documentation received with the product. Ensure you are familiar with that information before proceeding.

Failure to follow these instructions will result in death or serious injury.

Exclusion for Documentation

UNLESS SPECIFICALLY AGREED TO IN WRITING, SELLER (A) MAKES NO WARRANTY AS TO THE ACCURACY, SUFFICIENCY OR SUITABILITY OF ANY TECHNICAL OR OTHER INFORMATION PROVIDED IN ITS MANUALS OR OTHER DOCUMENTATION; (B) ASSUMES NO RESPONSIBILITY OR LIABILITY FOR LOSSES, DAMAGES, COSTS OR EXPENSES, WHETHER SPECIAL, DIRECT, INDIRECT, CONSEQUENTIAL OR INCIDENTAL, WHICH MIGHT ARISE OUT OF THE USE OF SUCH INFORMATION. THE USE OF ANY SUCH INFORMATION WILL BE ENTIRELY AT THE USER'S RISK; AND (C) REMINDS YOU THAT IF THIS MANUAL IS IN ANY LANGUAGE OTHER THAN ENGLISH, ALTHOUGH STEPS HAVE BEEN TAKEN TO MAINTAIN THE ACCURACY OF THE TRANSLATION, THE ACCURACY CANNOT BE GUARANTEED. APPROVED CONTENT IS CONTAINED WITH THE ENGLISH LANGUAGE VERSION

1

Important Safety Information

READ AND SAVE THESE INSTRUCTIONS

Electrical equipment shall be installed, operated, serviced, and maintained only by qualified personnel. Certain configuration tasks shall only be performed by qualified personnel in consultation with your local utility and/or an authorized dealer. Servicing of batteries and the BMS shall only be performed or supervised by qualified personnel with knowledge of lithium-ion batteries and their required precautions. Qualified personnel have training, knowledge, and experience in:

- Installing electrical equipment
- Applying applicable installation codes
- Analyzing and reducing the hazards involved in performing electrical work
- Installing and configuring lithium-ion batteries
- Selecting and using Personal Protective Equipment (PPE)

No responsibility is assumed by Xantrex LLC for any consequences arising out of the use of this material.

⚡⚠ DANGER

HAZARD OF FIRE, ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
- Equipment shall only be installed and serviced by qualified electrical personnel.
- Never operate equipment energized with covers removed.
- Inverters are energized from multiple sources. Before removing covers of inverters and other equipment, identify all sources, de-energize, lock-out and tag-out, and wait 2 minutes for circuits to discharge.
- Always use a properly rated voltage sensing device to confirm all circuits are de-energized.

Failure to follow these instructions will result in death or serious injury.

⚡⚠ DANGER

HAZARD OF FIRE, OR EXPLOSION

- Do not expose the Xantrex Battery to rain, snow, or liquid of any type. This battery pack is not suitable for marine applications.
- The Xantrex Battery must be used with the Xantrex Battery Management System (BMS).
- Always wear proper PPE (safety glass and clothing) when working on the Xantrex Battery.
- Do not wear metallic items such as watches or bracelets when working on the battery. Use insulated tools to prevent accidental short circuit.
- Do not short-circuit the battery.
- Do not expose the battery to flames.
- Do not step on the battery.
- Do not attempt to open or dismantle the Xantrex Battery. If the battery is damaged, do not touch the corrosive electrolyte or powder. In case battery content comes in contact with skin or eyes, immediately flush the affected area with large amount of clean water and seek medical help.
- When the battery is damaged, it can release harmful gases. Ensure the work environment is well-ventilated.
- In case of fire, use only a Class ABC type (dry chemical) fire extinguisher. Water can be a dangerous extinguishing medium for energized equipment because of the risk of electrical shock.
- Dispose of Xantrex Batteries through a local recycling center. Do not mix batteries with other wastes. Contact your local recycling center for proper disposal information.

Failure to follow these instructions will result in death or serious injury.

⚠ WARNING

RISK OF PERSONAL INJURY OR EQUIPMENT DAMAGE

- The Xantrex Battery must be mounted upright on a horizontal plane. Always follow the manufacturer's mounting instructions.
- Make sure the Xantrex Battery is fastened and secured. The battery is heavy and can become a crush hazard if not secured properly.
- Do not install the Xantrex Battery under the engine hood or adjacent to any heat source.
- You must install and use the required battery disconnect, fuses and fuseholders. Replace expended fuses with fuses of the same specifications.
- Do not use stainless lugs on the BMS terminals or on any high-current terminals.
- Always use proper lifting techniques when handling the Xantrex Battery.

Failure to follow these instructions can result in personal injury and/or damage to equipment and may void the warranty.

System Safety Information

⚠ WARNING

HAZARD OF ELECTRIC SHOCK, FIRE, OR PERSONAL INJURY

- Do not expose any of the equipment to rain, snow, or liquids of any type. Products in the system are designed for indoor use only.
- Do not obstruct the air ventilation openings on the system devices. Do not install or operate any of the system devices in compartment containing flammable materials or in locations that require ignition-protected equipment.
- Make sure that existing wiring is in good condition and that wires/cables are not undersized.
- Make sure that all DC and AC connections are properly tightened (to the correct torque specified by the manufacturer) and secured.
- Do not operate the inverter and other equipment with damaged or substandard wiring.
- Equipment such as the inverter must be provided with an equipment-grounding conductor connected to the AC input ground as well as a DC enclosure grounding conductor connecting the inverter chassis to the vehicle chassis.

Failure to follow these instructions can result in death or serious injury.

⚠ WARNING

HAZARD OF ELECTRIC SHOCK, FIRE, OR PERSONAL INJURY

- Install means of disconnection from all power sources, such as, AC and DC circuit breakers.
- Make sure that terminal covers are installed and there are no exposed conductors.
- Make sure the second alternator's temperature sensor is properly installed.

Failure to follow these instructions can result in death or serious injury.

⚠ CAUTION

RISK OF PERSONAL INJURY OR EQUIPMENT DAMAGE

- Use the right tools for the job. Use of improper tools may result in damage to equipment and personal injury.
- Verify the weight-bearing capacities of the compartments where the system devices will be mounted and installed.
- Do not lift heavy equipment by yourself. Use two or more people to lift and mount heavy equipment such as the inverter and battery. Use proper lifting techniques during installation to prevent injury and equipment damage.
- Mount and fasten all devices securely according to their installation guides.

Failure to follow these instructions can result in personal injury and/or damage to equipment and may void the warranty.

NOTICE

RISK OF BATTERY DAMAGE

- Observe proper polarity.
- Observe proper storage technique. Store the battery within the temperature and humidity specified by the manufacturer.

Failure to follow these instructions can result in damage to battery and may void the warranty.

2


Introduction

The Freedom e-GEN System Installation Guide for OEM Installers provides a system overview and installation instructions of a complete power solution that includes:

- a Freedom SW 3012 Inverter/Charger for power conversion,
- a Conext ComBox for Freedom SW and Tablet* for monitoring,
- a vehicle's second alternator and regulator kit as a power source, and
- a Xantrex Battery with Xantrex BMS for energy storage

This system installation guide is intended to be used by qualified installers. This document provides you as much detail as possible to guide you through the installation process; however, this is not a comprehensive, all-in-one guide. You must read the relevant product manuals that come with each of the system devices and understand the information in those manuals about safety, specification, installation and operation.

It is the installer's responsibility to ensure the installation is carried out in a safe manner and the end-installation is compliant to applicable code standards.

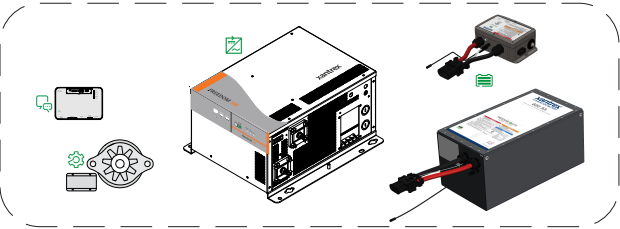








* Some systems may come with a System Control Panel (SCP)

3

System Devices

Required eGEN system devices and components to complete the installation.

	Device Name	Part Number	
	Freedom SW 3012	815-3012	provided
	ComBox for Freedom SW	809-0918	provided
	Ford Transit Alternator Kit	882-0050-12	provided, one of 4 options
	Sprinter 6-cylinder Alternator Kit	882-0010-12	
	Sprinter 4-cylinder Alternator Kit	882-0020-012	
	Dodge Promaster Alternator Kit	882-0030-12	
	Skid Plate for the second alternator	--	
	Xantrex Battery 12V 600Ah	880-0600-12	provided, one of 2 options
	Xantrex Battery 12V 450Ah	880-0450-12	
	Xantrex Battery Management System	881-0402-12	
	Battery Disconnect Switch (12VDC, 350A min)	--	not provided
	350A Class T fuse, Littelfuse	JLLN350	not provided
	100A fuse, Littelfuse	MEG100	not provided
	Class T fuse holder with cover, Blue Sea	5502	not provided
	600A Busbars, 1 for pos(+) and 1 for neg(-), Blue Sea	2104	not provided
	Busbar cover, Blue Sea	2708	not provided

	Device Name	Part Number	
	System Wiring Harness	881-0040-12	provided
	Xantrex Battery Combiner	881-0030-12	provided
	Android tablet	808-0016	provided
	Internet Modem/router	881-0050-12	provided
	System Remote Panel including LCD Display	881-0401-12	provided
	Freedom SW Remote Panel	808-9002	provided
	GFCI Kit	808-9003	provided
	Router Power Harness	881-0020-12	provided
	Xanbus cable and Xanbus network terminator	809-0941	provided

4

Installation

 **WARNING**

HAZARD OF ELECTRIC SHOCK, FIRE, OR PERSONAL INJURY
Read the system installation guide and associated product manuals prior to installation.
Failure to follow these instructions can result in death or serious injury.

- Prior to installation, identify and isolate all energy sources from the system. De-energize the system by:
 - removing AC power
 - turning off vehicle ignition
 - turning off the BMSKeep the system de-energized throughout the installation process.
Follow all necessary safety precautions, use personal protective equipment (PPE) and perform lock-out, tag-out (LOTO).
- Plan the mounting locations for all the devices and wiring components prior to wiring. Follow the mounting instructions for each device, verify the weight-bearing capacity of each mounting location and orientation, and ensure sufficient clearance for proper air ventilation.
- Mount and install the system devices before making cable or wiring connections. Secure heavy objects such as the inverter and the battery by bolting/strapping them to the floor.

- Mount and install the DC wiring components including the battery disconnect switch (if applicable), fuseholders, and the busbars. Their relative locations are shown in the system diagram. The battery disconnect switch and the fuseholder for the main battery fuse should be located as close to the BMS positive terminal as possible. If applicable, install the fuseholder for the DC load branch fuse on the positive cable close to the positive DC busbar.
- Mount and install the second alternator using the tools and instructions provided in the alternator kit. Follow the steps below as a guide but refer to the manufacturer's instructions for complete detail.
 - Install the second alternator using the mounting bracket and pulley provided in the alternator kit.
 - Ensure the alternator chassis is securely fastened to the vehicle metal chassis.
 - Use a straight edge or laser alignment tool to ensure pulleys are within 0.5 degrees of alignment.
 - Check all pulley grooves to ensure they are clean and undamaged. Check the belt to make sure there are no visible cracks, splits, or defects before installing it.
 - Install the belt. Ensure the belt is properly seated in the pulley grooves.
 - Check the belt tension between the engine and second alternator according to the manufacturer's recommendations. Adjust accordingly using the provided tensioner and a tension gauge. Under or over-tensioned belt will cause belt slippage and premature belt failure. It can also result in overheating of the alternator leading to equipment damage.

- Check that the Balmar Regulator has the "LFP" sticker before mounting. Contact Xantrex if the "LFP" sticker is missing.
 - Mount the Balmar Regulator.
 - Follow the second alternator manufacturer's wiring instructions and use the wiring harness in the alternator kit to make the connections between the second alternator and the Balmar Regulator.
 - Make sure the alternator temperature sensor in the wiring harness is installed on the second alternator's chassis and connected to the correct pins on the Balmar Regulator to prevent equipment damage and fire.
 - Make DC cable connections at the alternator. Refer to "DC Cable and Fuse Requirements" for conductor sizing. Use a separate cable for alternator negative return to the battery. Ensure all electrical connections are secured. To protect from dust and water, install a skid plate (not provided but recommended).

- Read "DC Cable and Fuse Requirements". Then, make the DC cable connections between all system devices by following the "System Diagram for Power Connection". Observe correct polarity.
- Install the required DC fuses on to their respective fuseholders.
- If applicable, install a venting tube (rubber tubing) to the pressure balancing valve on the battery and secure it with a clamp.
- Make AC wiring connections to the Freedom SW according to the "System Diagram for Power Connection". Follow the Freedom SW installation guide (document number: 97-0020-01-01) for AC wire sizing instructions.
 - Wire the GFCI kit to the Freedom SW AC INPUT according to the "System Diagram for Power Connection". You must wire to the line side of the GFCI through the 15A supplementary breaker. Use proper wire-splicing technique and ensure the wire joints are secured and covered with electrical tape.
 - Wire the Freedom SW AC OUTPUT to your AC load panel.
 - Install the GFCI kit to cover the Freedom SW AC terminal.
 - Ensure that all upstream and downstream surge protector and AC circuit breakers are properly installed. Refer to the Freedom SW installation guide for breaker sizes.
 - Locate the AC adapter provided in the system wiring harness. Plug it to one of the two AC receptacles on the GFCI.

- 

- 

- 

- 5

3

System Diagram for Power Connection


NOTICE

EQUIPMENT DAMAGE

The system diagram is for information and illustration purposes only. Always use a professional installer that satisfies the requirements for a qualified personnel.


Failure to follow these instructions can result in damage to equipment.

LEGEND

- 
 DC - cable
 DC + cable
 Chassis ground
 green/bare = GROUND
 black = LINE/HOT
 white = NEUTRAL

NOTE:

- The diagram is for information and illustration purposes only. Images are not-to-scale.
- The system diagram is not intended to guide the actual placement of equipment.
- Read and follow ***“DC Cable and Fuse Requirements”*** section.

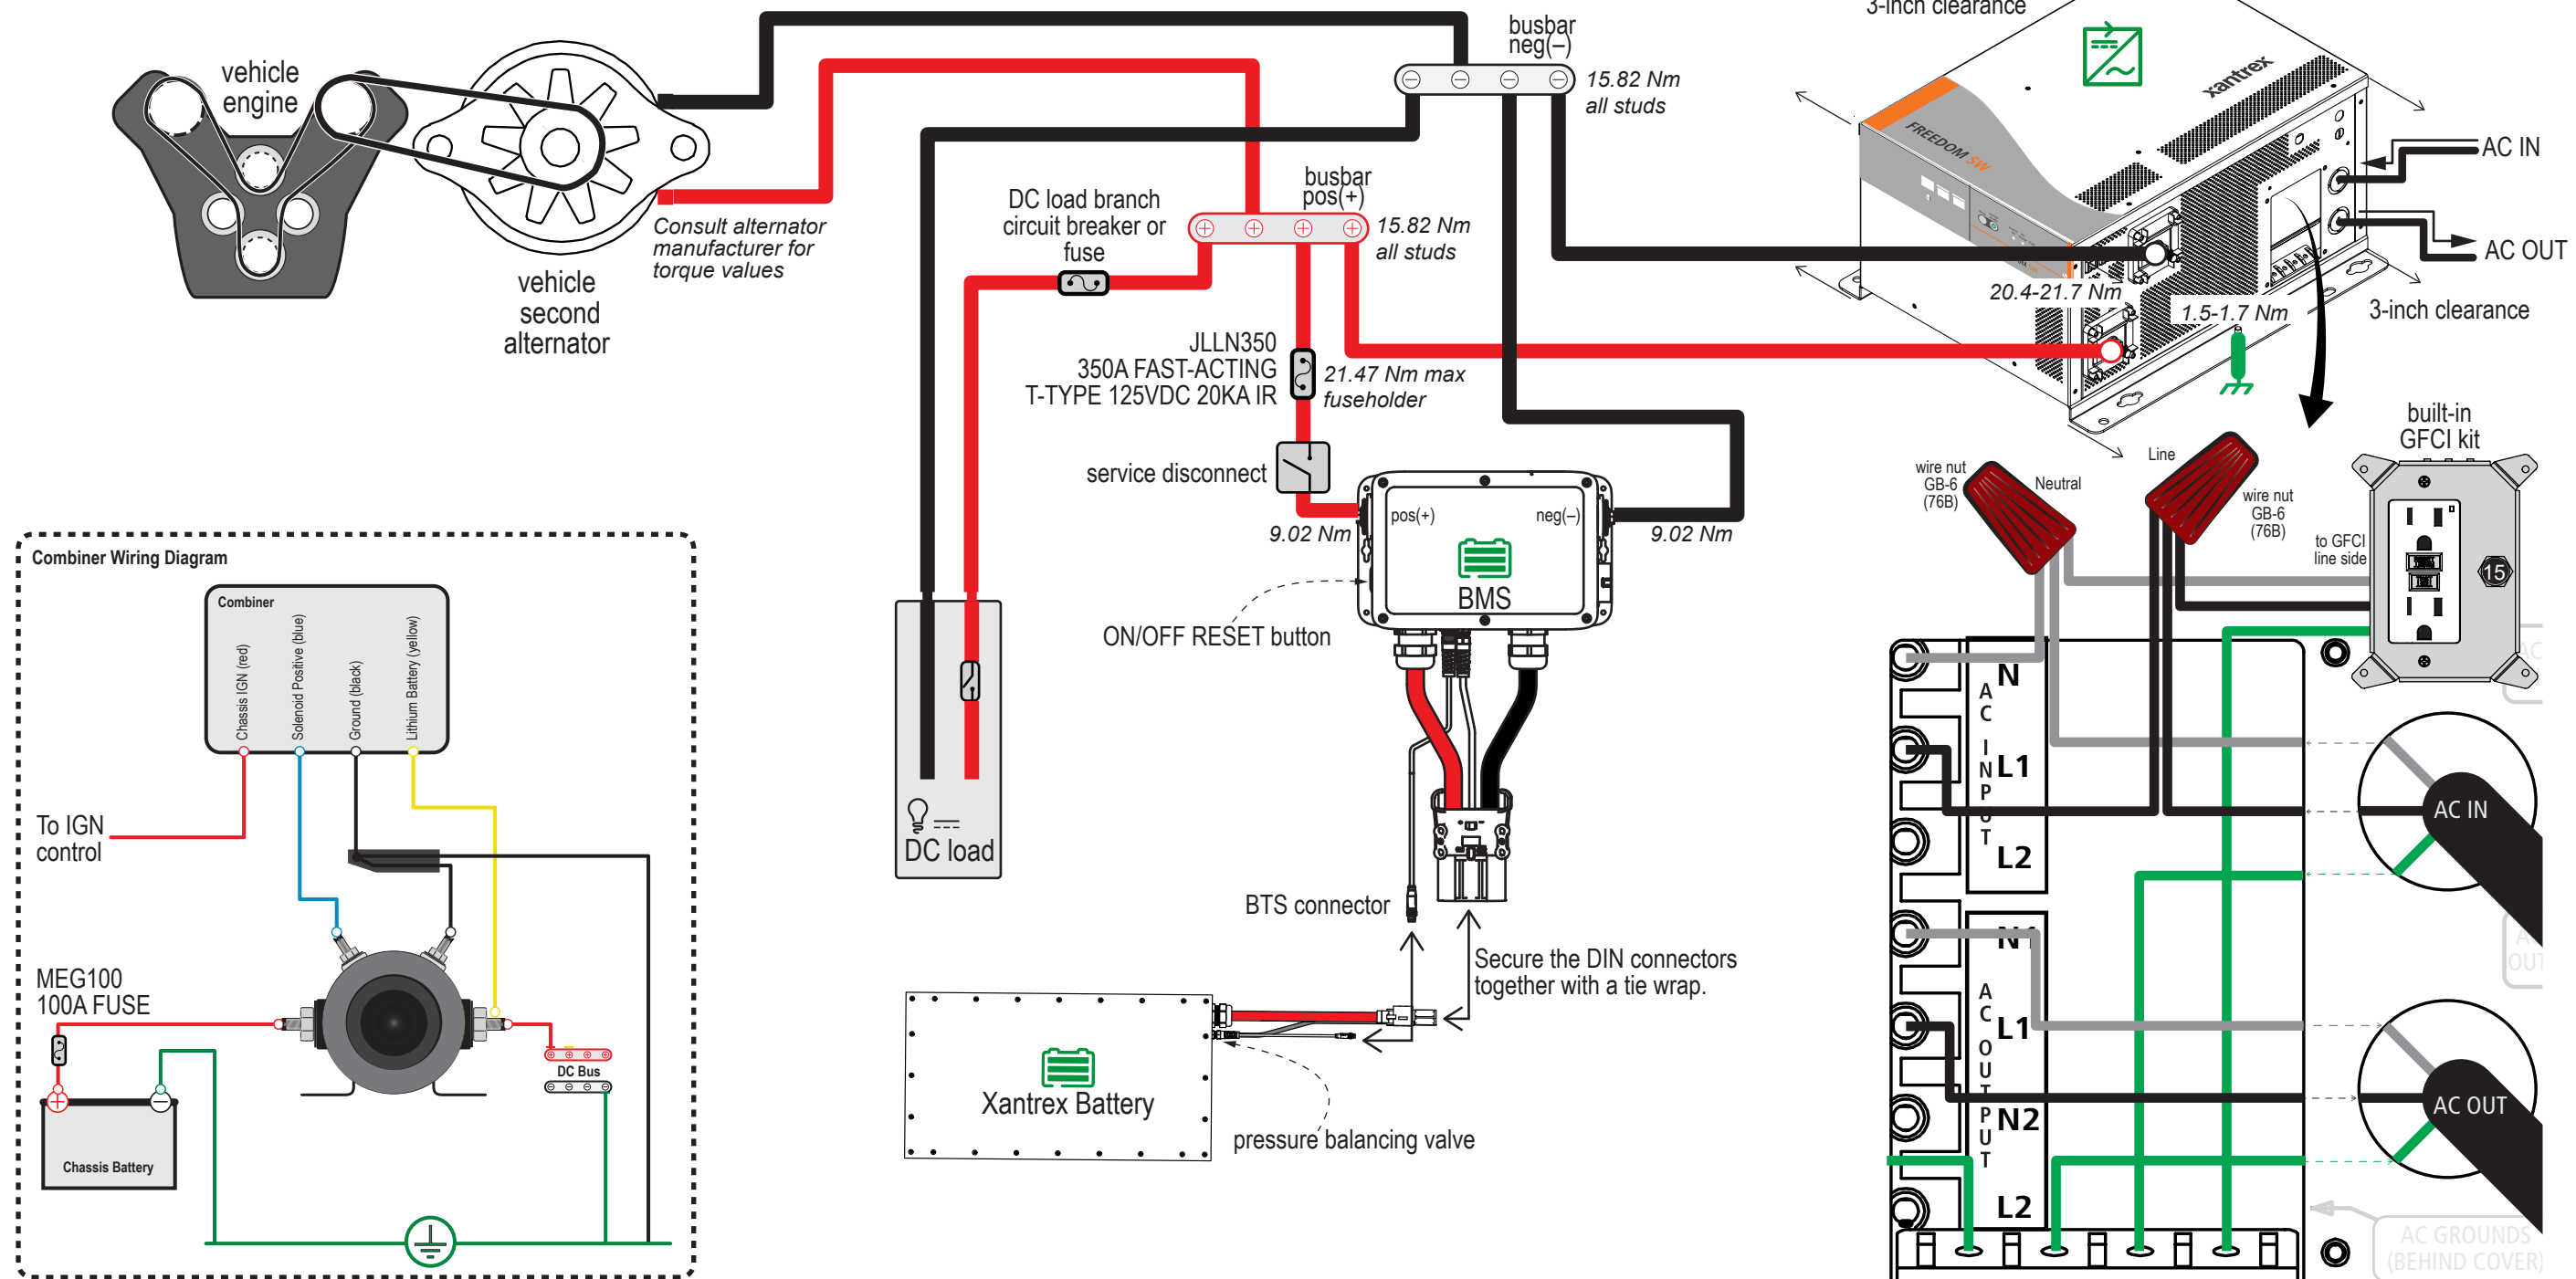

System Diagram for Communication Connection

NOTICE
EQUIPMENT DAMAGE
The system diagram is for information and illustration purposes only. Always use a professional installer that satisfies the requirements for a qualified personnel.
Failure to follow these instructions can result in damage to equipment.

- NOTE:**
- The diagram is for information and illustration purposes only. Images are not-to-scale.
 - Route data cables away from devices that can potentially interfere with data communications.

